**Installation Instructions and Surface Preparation for**
**PERMALIGHT® self-adhesive Wall- and Corner Guards**

**PERMALIGHT®** self-adhesive **Wall and Corner Guards** come with a strong self-adhesive backing. Even if an installation surface looks clean, it may have accumulated a layer of dust or grimy sheen over time generated by age, wear and dirt in the installation environment. Here are a few easy **Surface Preparation** steps that assure a long-term adhesive bond.

1. Clean first!!! Wipe over the installation surface with a water-moistened microfiber cloth.

2. For rather dirty, grimy surfaces, wipe the installation surface a second time, now with isopropyl alcohol applied to a different microfiber cloth. Once the alcohol has evaporated, the surface is excellently surface-prepped for the adhesive-backed polyurethane foam guard to stick durably and reliably.

3. If you received a **16-foot long Foam Guard**, it was rolled into a tight coil for ease of shipping. Immediately upon receipt, unpack the roll and lay it out straight and long, so the tightly coiled polyurethane foam can **straighten**-out **at ROOM TEMPERATURE overnight**.

4. If you want to cut the polyurethane foam guard to a specific length, hold it in place with the adhesive still protected by its silicone paper. Measure and mark the length. Cut the foam guard to your desired length, using a utility knife with a fresh blade. For high-volume cutting, Miter Shears with Cutting Blade or a Cutter are most effective.

! Careful – do not cut yourself! All these recommended Tools are extremely sharp!!

5. Remove the silicone paper from the adhesive backing withOUT touching the adhesive. Hold the foam guard along its sides to keep the strong adhesive free of finger prints.

6. Firmly press-apply the foam guard in place. Do NOT pull it off to re-align or re-adjust. The self-adhesiveness is its strongest when it is pressed in the right spot on the first application. Any removing and re-applying will decrease the adhesive's strength and weaken the initial strongest bond.

11-2018

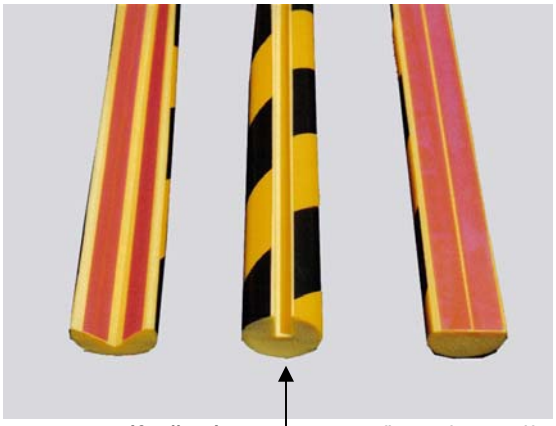


shown here: A 90° cut-out: self-adhesive C flat surface, self-adhesive

16 feet are rolled into a tight Coil for ease of shipping